


Posi-Products Installation Instructions


Posi-Twist:

1. Strip all wires to be inserted 3/4".
2. Twist all wires together.
3. Completely unscrew the top from the Posi-Twist.
4. Feed the twisted wires through the bottom portion of the Posi-Twist.
5. While ensuring the wires do not slip out of the bottom of the Posi-Twist, attach the top and tighten.

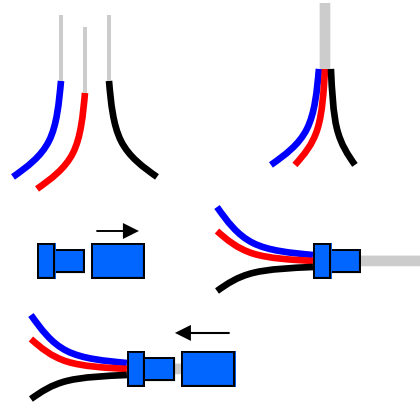

Posi-Tap:

1. Unscrew the cap of the Posi-Tap (gray or large end).
2. Slide the wire you wish to tap into through the slot in the cap.
3. Re-attach the body of the Posi-Tap and tighten.
4. Attach the other wire to the bottom using the same method as a Posi-Twist.

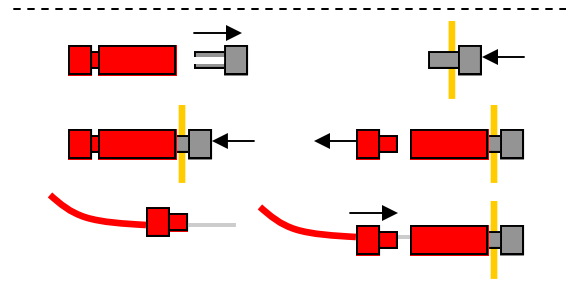

Posi-Lock:

Attach the wires to the screw in connectors using the same method as Posi-Twists.

